

AX-GS-CM-V-65

Carbon Monoxide Voltage Transmitter IP65, with optional display

AXIO



Product overview

The AX-GS-CM-V-65 Carbon Monoxide Voltage Transmitter provides a linear output signal for CO levels from 0-300ppm. The output voltage is configurable for either 0-5Vdc, 2-10Vdc or 0-10Vdc. Options include relay(s) with set trip points and an LCD display. The sensor module uses a plug-in connector, making for easy in-the-field replacement.

The unit can be mounted with the cable gland entry pointing up or down.

Refer to the AX-GS-CM-I data sheet for 4-20mA options

Features

- Monitors CO levels over a range of 0 to 100/300ppm
- Electrochemical sensing element
- Relay option with jumper set alarm levels
- Easy installation with plug-in connections
- 3 year warranty
- 0-5, 2-10 or 0-10Vdc selectable voltage output
- Open-collector fault output
- Easy maintenance and 3 year exchange sensor option
- Sensor is UL recognised component UL2034, UL2075, E240671

Product specifications

Sensor Type:	Electrochemical 3-electrode
Power Supply:	24Vac \pm 10%, 100mA maximum or 24Vdc \pm 10%, 60mA maximum
Output:	0-5Vdc, 2-10Vdc or 0-10Vdc at 5mA maximum load
Output Range:	0-300ppm (0-100ppm as an option)
Output Accuracy:	\pm 5ppm or \pm 5% of reading (whichever is greater) between 0-50°C
Output Stability:	<5% signal drift per year
Relay (option)	SPCO relay, 230Vac 5A (resistive) can be set to trip at 25, 60 or 150ppm
2 Relay (option)	Two SP relays, 50V 1A (resistive) can be set to trip at 25/50, 60/100 or 150/200ppm
Fault output	Open collector. 30Vdc at 100mA maximum
Display (option)	4 digit 9mm high character backlit LCD of reading in ppm
Typical Coverage Area:	700m ² or 15m radius
Settling Time:	3 minutes after power up
Life Expectancy:	>3 years dependant on environment
Ambient Temp. & Humidity Range:	0-50°C, 15-90% RH non-condensing
Housing:	Flame retardant ABS, IP65, White (optional Black - see order codes)
Dimensions & Weight:	92mm diameter x 52mm, 170gms
Terminals:	Rising clamp for 0.5-1.5mm ²
Country of Origin:	United Kingdom

Order codes

Carbon Monoxide Voltage Transmitter IP65

No Display	With Display	Description	
AX-GS-CM-V-65	AX-GS-CM-VL-65	0-300ppm	
AX-GS-CM-V-100-65	AX-GS-CM-VL-100-65	0-100ppm	Add -B to all
AX-GS-CM-VR-65	AX-GS-CM-VRL-65	0-300ppm with relay	part numbers
AX-GS-CM-VR-100-65	AX-GS-CM-VRL-100-65	0-100ppm with relay	for optional
AX-GS-CM-VR2-65	AX-GS-CM-VR2L-65	0-300ppm with 2 relays	black enclosure
AX-GS-CM-VR2-100-65	AX-GS-CM-VR2L-100-65	0-100ppm with 2 relays	

© Copyright Annicom 2018. All Rights Reserved

ANNICOM

Annicom Ltd

Unit 21, Highview, Bordon, Hampshire. GU35 0AX

Tel: +44 (0)1420 487788 Fax: +44 (0)1420 487799

Email: sales@annicom.com Website: www.annicom.com

AX-GS-CM-V-65

Carbon Monoxide Voltage Transmitter IP65, with optional display



Installation

The AX-GS-CM-V should be installed by a suitably qualified technician in conjunction with any guidelines for the equipment it is to be connected to and any local regulations. Field wiring should be installed to satisfy the requirements set out by the manufacturer of the equipment that the module is being connected to.

Location

The enclosure should be mounted at a height of 1 to 1.5 metres from the floor of the area to be monitored in an area of good airflow. For best operation do not mount the sensor near doors, opening windows, supply air diffusers or other known air disturbances. Avoid areas where the transmitter would be exposed to vibrations or rapid temperature changes.

Connections

The transmitter should be connected to the controller using 0.5 to 1.5mm² cable. The unit requires three wires 24V supply, 0V and CO level output. The use of shielded cable is recommended for the highest noise immunity. Do not route signal wires in the same conduit with power cables as signal degradation may occur. Before applying power, ensure that the AX-GS-CM-V transmitter output is configured correctly for the unit being supplied.

Voltage range selection

Place the VRANGE jumper in position 0-5 for 0-5Vdc output, 2-10 for 2-10Vdc output or 0-10 for 0-10Vdc output. When the 2-10V range is selected, and the unit detects a fault, the output will be set to 1V. Also if wiring becomes open-circuit, the measured voltage will drop to 0V.

Fault output

This is an open collector output. The output will be switched on when no faults are detected, and off when a fault is detected or no power is applied.

Relay trip point (option) ppm

TP jumper	Single Relay	Dual Relay	
		Relay 1	Relay 2
25	25	25	50
60	60	60	100
150	150	150	200



Status LED

This flashes 6 times every 8 seconds. A brighter flash in the sequence indicates a fault, ordered as:


- | | |
|------------------------|-------------------------|
| 1 - Program memory | 2 - Internal |
| 3 - Calibration | 4 - CO sensor selection |
| 5 - Temperature sensor | 6 - CO sensor |

Sensor module replacement

To replace the sensor module remove the fixing screw and slide module to the right. After replacing the module, check the status LED indications give 6 equal flashes (no bright flash).

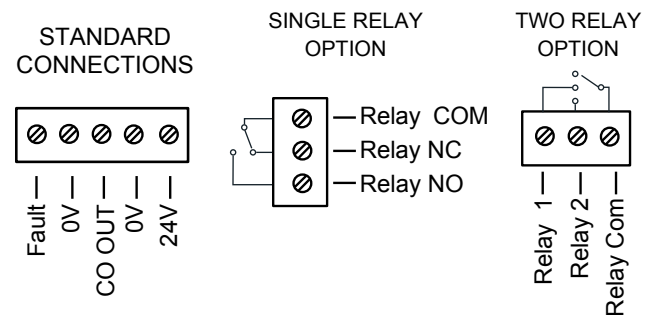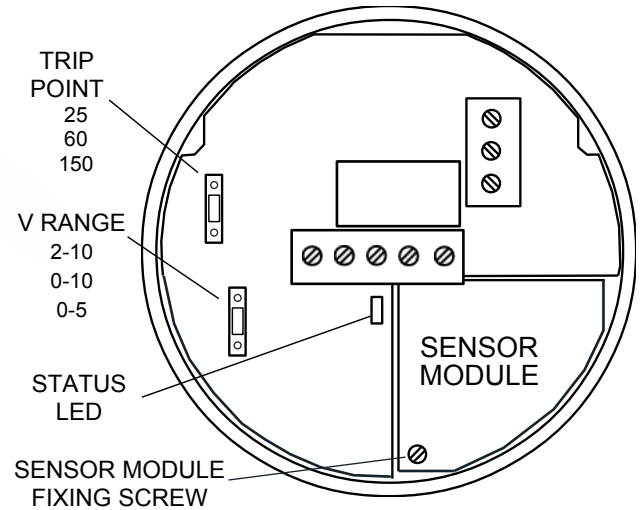

Fixing

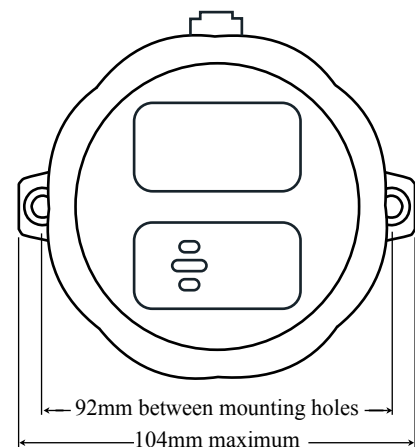

Usage

Suitable for monitoring and ventilation applications. Do NOT use in safety critical or hazardous applications. Axio recommend using the 2-10V range and/or the Fault output to maintain confirmation of correct operation of the unit.

Every effort has been taken in the production of this data sheet to ensure accuracy. Axio do not accept responsibility for any damage, expense, injury, loss or consequential loss resulting from any errors or omissions. Axio has a policy of continuous improvement and reserves the right to change this specification without notice.